

# DIGITAL PHOTO FRAME



Model MF-575

User Manual

Congratulations! You are the proud owner of a MemoryFrame™ Digital Picture Frame. Boasting high-quality image resolution the MemoryFrame™ is the perfect product for displaying your favorite digital photos , or listening to your favorite MP3's.

Because MemoryFrame™ has a changeable decorative frame, you can suit your décor whether in the home or office. The MemoryFrame™ can be configured to display photos in a slide show or as a still picture. With its ease of use and configuration, you can now display all your favorite pictures files for everyone to see!

## Package Contents

Before using the MemoryFrame™ , be sure to check all the accessories contained in the package. MemoryFrame™ comes with the following items:

- A. MemoryFrame™ unit
- B. AC .Power Adapter
- C. User Manual

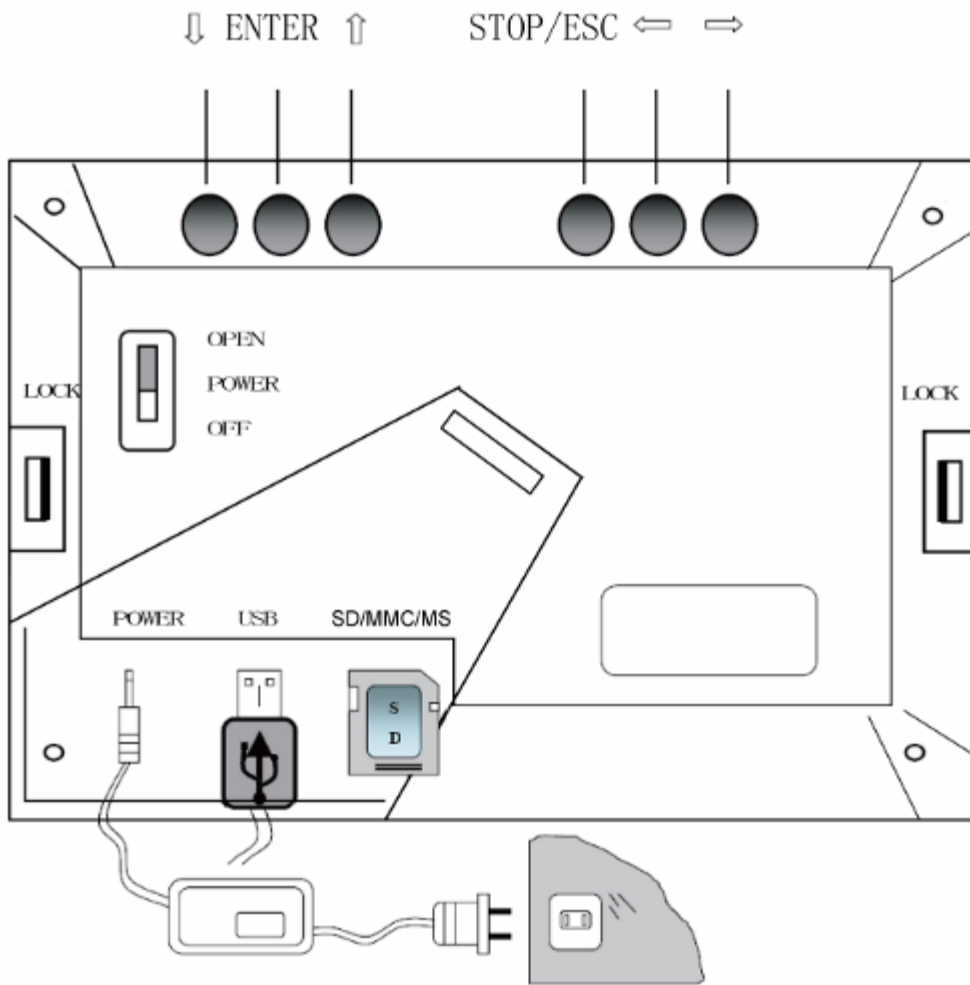
## Features

- 1 Display photos and videos without a computer
- 2 Listen to MP3 audio while displaying photos
- 3 Simple operation, insert the media card into the convenient slots to view pictures, or listen to MP3's
- 4 Support: SD/MMC/ MS/XD , USB
- 5 TFT-LCD with high resolution, wide view angle and rich color
- 6 Built-in stereo speakers
- 7 The frame is changeable, various decorative frame in style and color for your selection

## Specifications

<b>Model</b>	MF-575
<b>Unit Size</b>	162 (H) x 212 (W) x 50(D) mm
<b>Display Area</b>	84.708(H) x113.28(W) mm
<b>Resolution</b>	320x234
<b>Brightness</b>	250cd/m <sup>2</sup> max.
<b>Contrast ratio</b>	150:1
<b>Viewing angle</b>	65/65 (L/R) ,45/65 (T/B)
<b>Input voltage</b>	AC100—240V(50HZ—60HZ)
<b>Unit Input Voltage</b>	12VDC @1.5A
<b>Working Temperature</b>	0°C - 50°C
<b>Unit Weight</b>	0.73KG
<b>Formats</b>	MPEG1/MPEG2/MPEG4, MP3, JPG/JPEG
<b>Media</b>	SD / MMC / MS / XD ,USB
<b>Max Images</b>	Based on media capacity

## Connection and Layout



## Buttons

ENTER : Play & Enter

STOP/ESC : Stop, Pause & Esc

↑ UP : Up Select & VOL+

↓ DOWN : Down Select & VOL-

← LEFT : Left Select, & Rotate

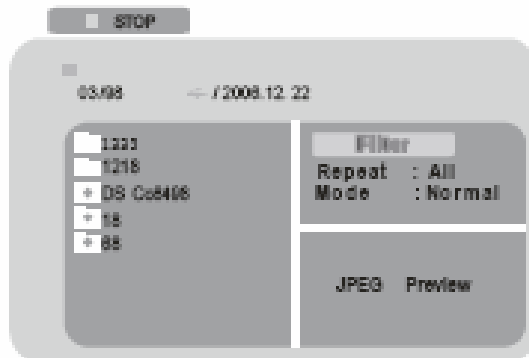
→ RIGHT : Right Select, & Rotate

## Main Page

When Power is first turned On, the Main page is displayed. Use the Up and Down navigation buttons to locate the desired function. Use the button to select. Enter



Press “UP/DOWN” button to choose “SD” “USB” “Setup” .  
press “ENTER ” to next



Filter: audio, photo, video  
Repeat: single, all, off  
Mode: normal, shuffle on

- 1 Filter: Press left or right button to select filter  
Press up or down button to select audio, photo, video  
Press Enter button to enter
- 2 Repeat: Press up or down button to select repeat  
Press Enter button to select repeat item
- 3 Mode: Press up or down button to select Mode  
Press Enter button to select Mode item

## Enter

1. Press “ Enter” button to pause. It is silent in standby mode.

Then press “ Enter” button to replay.

Stop playing by pressing “ STOP”, and it will enter holding on mode. The player can remember the position where it stopped.

2. Press “ Enter” button and continue to play from where it stopped.

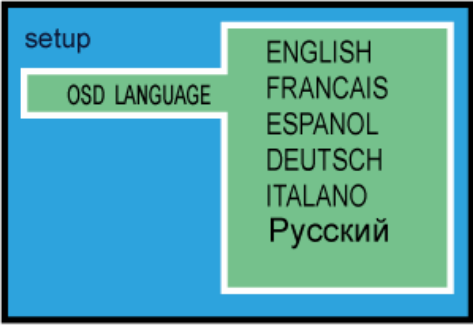
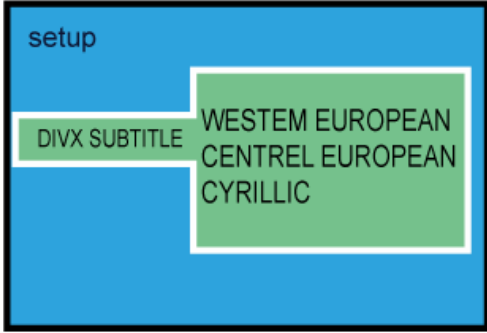
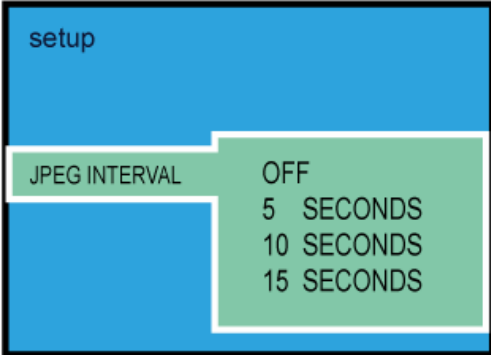
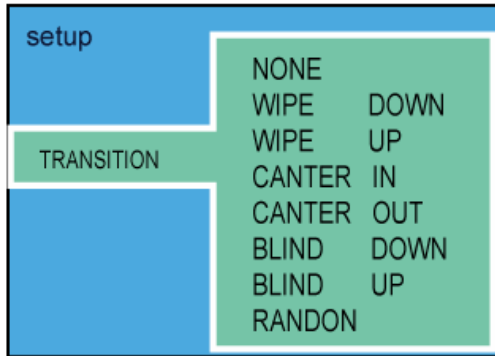
### CARD SELECTION GUIDE/SELECTION OF OUTER STORAGE DEVICE

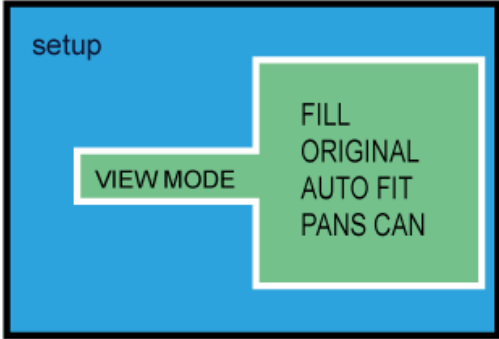
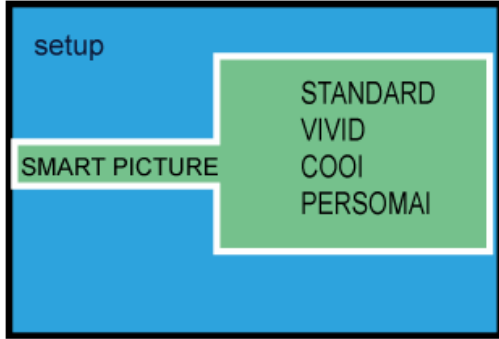
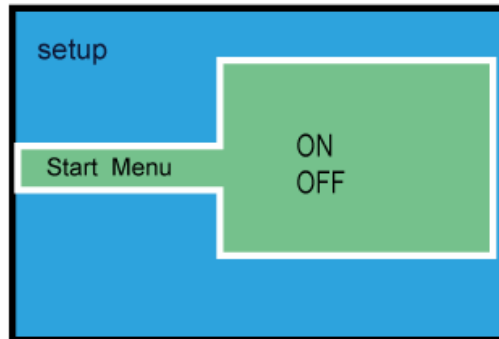
Press “STOP” button, then pressing “ Enter” button to select the priority of the connected card or device. The player will play your selected device/card first.

## Setup

The Setup Menu is used to view and change useful slideshow parameters to customize the look and

operation of slideshows. These settings are defined and explained below.

Function	Sample Screen
<p>OSD LANGUAGE</p> <p>Set up OSD as below:            English = English OSD            Francais = Francais OSD            Espanol = Espanol OSD</p> <p>Deutsch = Deutsch OSD            Italiano = Italiano OSD            Русский = Русский OSD</p>	 <p>The sample screen shows a blue background with the word 'setup' in the top left. A green box on the right contains a list of languages: ENGLISH, FRANCAIS, ESPANOL, DEUTSCH, ITALANO, and Русский. A smaller green box on the left contains the text 'OSD LANGUAGE'.</p>
<p>DivX SUBTITLE:</p> <p>Press " up/down" button to DivX subtitle , then press " Enter" button to choose the desired language.</p> <p>Press' up/down' to change the setup.</p> <p>Press' Enter' button to open a list, and press' up/down' to change the highlight item.</p>	 <p>The sample screen shows a blue background with the word 'setup' in the top left. A green box on the right contains a list of subtitle options: WESTEM EUROPEAN, CENTREL EUROPEAN, and CYRILLIC. A smaller green box on the left contains the text 'DIVX SUBTITLE'.</p>
<p>jpeg interval:</p> <p>Press' up/down' button to jpeg interval , then press " ENTER' button to open a list, and press' up/down' . to change the highlight item. Press' ENTER' to change the setup.</p>	 <p>The sample screen shows a blue background with the word 'setup' in the top left. A green box on the right contains a list of options: OFF, 5 SECONDS, 10 SECONDS, and 15 SECONDS. A smaller green box on the left contains the text 'JPEG INTERVAL'.</p>
<p>Transition</p> <p>Press" up/down"button to "TRANSITION", then press"ENTER" button to open a list, and press" up/down"to change the highlight item.Press "ENTER" to change the setup.</p>	 <p>The sample screen shows a blue background with the word 'setup' in the top left. A green box on the right contains a list of transition options: NONE, WIPE DOWN, WIPE UP, CANTER IN, CANTER OUT, BLIND DOWN, BLIND UP, and RANDON. A smaller green box on the left contains the text 'TRANSITION'.</p>

<p><b>View Mode</b>  User can set up the display mode in this menu  fill=full screen mode  Original=Original size mode  Auto fit=Automatically full screen mode  Pan scan=Pan moda</p>	
<p><b>Smart Picture</b>  User Can Adjust the Picture brightness, Four selections as following  Standard  Vivid  Cool  Persomal</p>	
<p><b>Start Menu</b>  Press " up/down" button to "Start Menu", then press "ENTER" button to open a list, and press " up/down".to choose "on" or "off", Press "ENTER" to change the "on" or "off".</p>	

## Notes